



Installation Instructions

CX2121AM Automatic Metal Shutter for Gable Mount Power Attic Ventilators



Physical Dimensions: 22 in. x 22 in.
Rough Opening: 18.5 in. x 18.5 in.

READ ALL WARNINGS AND INSTRUCTIONS BEFORE BEGINNING TO INSTALL THIS UNIT.

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

1. Before servicing or cleaning this unit, switch power off at the service panel and lock out to prevent power from being switched on accidentally. When service disconnecting means cannot be locked, securely fasten a prominent warning tag to the service panel.
2. Installation work and electrical wiring must be performed by a qualified person in accordance with the applicable codes and standards, including fire-related construction.
3. When cutting or drilling into a wall or ceiling, do not damage electrical wiring and other hidden utilities.
4. The combustion airflow needed for safe operation of fuel-burning equipment may be affected by this unit's operation. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire and Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air-conditioning Engineers (ASHRAE), and the local code authorities.

SAFETY



This safety alert symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER

Danger indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.



WARNING

Warning indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

SAFETY INSTRUCTIONS WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:



CAUTION

Caution indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.



ELECTRICAL SHOCK

Used to indicate an electrical shock or electrocution hazard.

INSTALLATION INSTRUCTIONS

LOCATION

1. Locate suitable location along wall away from prevailing winds. If multiple units are to be installed, units should be spaced evenly throughout the building to provide balanced airflow.
2. Remove any insulation or nonstructural material from location.

CUTTING

3. Requires 18.5 in. x 18.5 in. rough opening (RO)

Remove wall studs as needed. (Fig. 1 & 2)





4. After studs are removed, cut appropriate sized RO in outer wall. RO should be centered between remaining studs and positioned so that lowest point of the RO will be at least 8ft above floor level where possible.

FRAMING

5. Using conventional framing methods in accordance with local building requirements and codes, build a frame around the RO to support the unit and maintain structural integrity of the wall as needed. (Fig. 3)

INSTALL SHUTTER UNIT

6. When satisfied with unit position, attach shutter unit to outer wall framing using screws as needed. (Fig. 4)

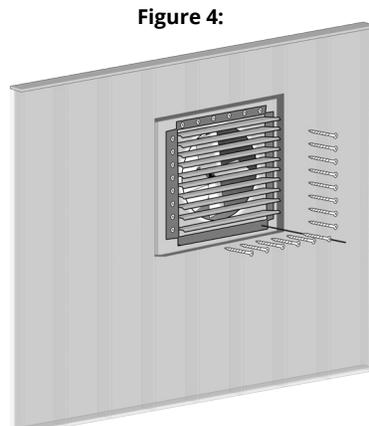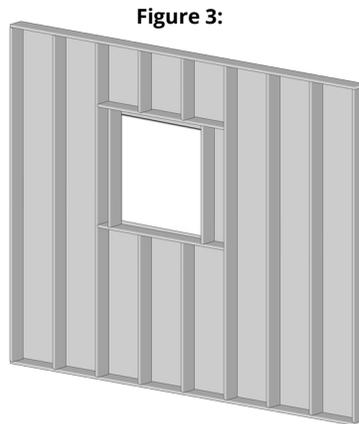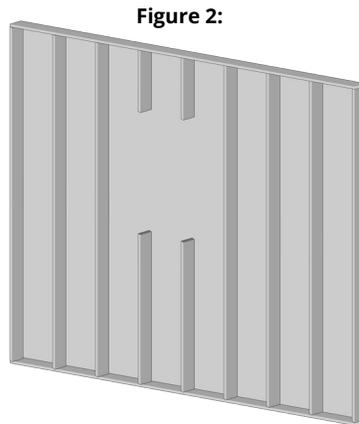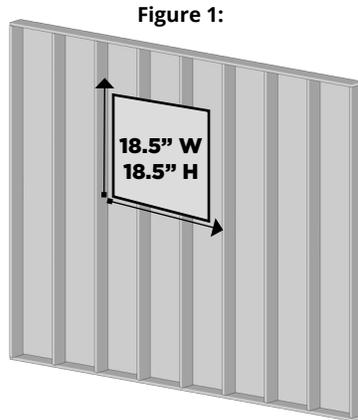

VENTAMATIC, Ltd.

LIMITED WARRANTY STATEMENT

This warranty is underwritten by Falco Insurance Company and is extended to the original retail purchaser of this model or, if this unit is purchased and requires installation by a building contractor, to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty. This product is warranted against defects in materials and workmanship for a period of two (2) years from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like.

Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, two (2) years from the date of the original retail purchase of the unit.

In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid.

You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking its obligations under this warranty. The right to demand and receive written evidence of date of purchase extends to all licensed dealers of Ventamatic, Ltd. products.

You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

To start a warranty claim you must:

Contact Ventamatic, Ltd.

An RGA (Returned Goods Authorization) form is required for returns to the factory to ensure your return can be processed efficiently and quickly. Please contact Ventamatic, Ltd. toll-free at 800-433-1626 or via web at www.bvc.com to obtain an RGA and follow the instructions given.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty two (2) years from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

rev. 04/19