



INSTRUCTIONS & OWNER'S MANUAL



Keep for future reference. Common problems and solutions are listed within this booklet.

IMPORTANT INFORMATION INSIDE: Read, understand, and follow all safety information and instructions.



Cool Draft MiniMister 14" Misting Fan
CDMP1420BLU

CONTENTS

1	THANK YOU	5	SPECIFICATIONS	9	MAINTENANCE
2	HOW IT WORKS	6	GETTING STARTED	10	TROUBLESHOOTING
3	HAZARDS	7	MID-PRESSURE UNITS	11	1 YEAR WARRANTY
4	CAUTION!	8	LABELED FAN	12	WARRANTY REGISTRATION

1

THANK YOU

Thank you for selecting Cool Draft's self-contained misting equipment for your comfort conditioning needs. Our products are engineered with the most reliable components available and are equipped with features to assure ease of use, mobility, and maintenance. **Thank you again and stay cool!**

2


HOW IT WORKS

The cool air you will enjoy is created through the process of evaporation. Heat is required to change water from a liquid to a gas (water vapor). Cool Draft's self-contained power misting equipment creates a "fog" by pumping water at a low rate through small nozzles. When combined with air the fog rapidly evaporates. The heat that is required to evaporate this fog is extracted from the air resulting in reduced air temperature.

3

HAZARDS

The following hazardous situations may be present while using this equipment:

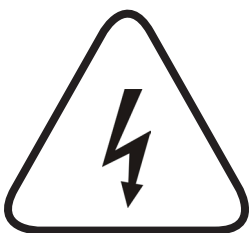

ELECTRICAL SHOCK
HAZARD



PINCH HAZARD



TRIP HAZARD



SERIOUS INJURY OR
DEATH MAY OCCUR

4

CAUTION!

- Only plug models into properly grounded receptacles
- Test GFCI before using
- Do not carry the unit by the motor, electrical cords, hose line, fan guard, or support bars
- Do not touch fan motor during use or directly after (fan motor housing may be hot)
- Do not insert anything into fan guard while operating
- Unplug unit and dry wet areas before resetting a unit after it has tipped over
- Position all electrical cords to lie flat on the ground or floor surface
- Never use during rain, sleet, hail, snow, or any inclement weather conditions
- Never operate pump without water supply
- In case of leaks, turn off pump and tighten leaky fittings with hand
 - Do not use tools to tighten nozzles, always hand-tighten
- Always use fresh water in cooler
 - A plugged filter caused by poor quality water can restrict pump flow, causing permanent damage
 - Hard water can clog nozzles
- Do not allow fog from nozzles to come into contact with surfaces
 - Condensation will form on surface
- Drain unused water and allow tank to dry completely before placing fan head inside for storage purposes. Do not submerge the GFCI plug into water, as doing so will damage the unit and render it inoperable

5

SPECIFICATIONS

- Voltage (VAC): 120
- Frequency (Hz): 60
- Fan Amps: 1.05
- Total 1.2 Amps
- CFM: Up to 1000 (High)
- Speeds: Hi / Med / Low
- Model # CDMP1420BLU: 14" fan head, 100 psi pump, 20 gal cooler, pumps out 3 gph
- Misting Ring: High impact plastic
- Filter: 50 mesh stainless steel strainer
- Water Supply POTABLE ONLY

6

GETTING STARTED

1. Take empty cooler to location desired to be cooled.
2. Fill cooler with clean water.
**Less water results in less run time
3. Place the fan/pump enclosure on the cooler.
4. Make sure the intake line and filter are in the bottom of the cooler.
5. Follow specific unit instructions.

7

MID-PRESSURE UNITS

1. Follow the directions in the "Getting Started" section.
2. Aim mister downwind for best results. If more than one mister is used, arrange them in an arc.
3. Plug the GFCI safety plug into any 120 VAC 60 Hz ground outlet.
4. Test the GFCI
 - a. Plug into outlet. Indicator will show if power is available.
 - b. Press the test button. Indicator will turn off.
5. After use, drain the cooler case of water and store fan inside



Do Not use if test fails.

****CDMP1420BLU fan will mist for approximately 6 to 8 hours**

CDMP1420BLU unit shown.

**Fan may differ in appearance depending on your model type.

**Filter:**

- Filter should be cleaned before and after each use.
- A dirty filter will restrict water flow and could cause permanent damage.

Nozzles:

- Check nozzles regularly to assure the best performance.
- The fog exiting from the nozzles should have an even cone shape. If this is not the case, the nozzles should be replaced.
- Clogged nozzles can be cleaned by removing them from the misting hub and soaking them in CLR™ solution or slam them against a hard surface to break the buildup loose. If they still fail to work, replacement nozzles are available for purchase separately.
- Before reinstalling nozzles, flush water line to misting hub.

PROBLEM: Not Misting

- Make sure hose is at the bottom of the cooler and the filter is completely submerged in water.
- Run through the start-up procedure to clear air from hose.

PROBLEM: Nozzle is Shooting a Stream of Water

- Remove and clean nozzles.
- Scrape the opening with a hard metal surface or flat head screwdriver while the system is running.



Do Not use your finger, as the high pressure water could cause injury!

PROBLEM: No Power to the System

- Check plug and breaker
- Make sure fan is not in the "off" position. Pull switch on enclosure to "fan only" or "mist fan" and switch speeds.

Ventamatic, Ltd. extends this warranty to the original retail purchaser of its model. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty. This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like. Repairs or replacement parts supplied under the warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit.

In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid. You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking to perform its obligations under this warranty. You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

In order to obtain the repair or replacement of this unit, you must select one of the following methods:

A. Return to factory.

Return postage prepaid only the part or component which you believe to be defective to the following address:

Ventamatic, Ltd.
100 Washington Street
Mineral Wells, TX 76067

*Complete and enclose a written claim and attach a copy of your sales slip or other proof of purchase

B. Return to retail dealer.

If the retail dealer from whom you purchased this unit stocks replacement parts or components, you may return a part or component which you believe to be defective to that dealer for replacement.

Caution: Only a limited number of our retail dealers stock replacement parts. If your dealer does not, you must return the part to the factory following the procedure described in paragraph "A" above. There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of a defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

Our warranty is as strong and effective as possible.

Please keep the following information for your records.

IMPORTANT

Record of Purchase

Purchaser's Name: _____

Date of Purchase: ____/____/____ Store Name: _____

Address: _____

City: _____ State: _____ Zip Code: _____

Model: _____ Purchase Price: \$ _____



1-800-433-1626

Cool Draft by Ventamatic

PO Box 728

Mineral Wells, TX 76068

www.cooldraft.com

VENTAMATIC, LTD. P.O. BOX 728, MINERAL WELLS, TX 76068-0728 • PHONE 800-433-1626 • WWW.BVC.COM

A leader in the ventilation industry for over 60 years, Ventamatic, Ltd. offers a complete line of air movement products for commercial, industrial, agricultural, and residential use.

Ventamatic, Ltd.
AN AIR OF EXCELLENCE

©2018 VENTAMATIC, LTD. CDMP1420INSMAN 0518/WEB

